 


See instruction sheet enclosed with your Six Bow Hanger for outdoor use.


Figure A: Outside Use Only



Outside Ground Use Only!

Archery Shooter Systems
109 N. Wagner St.
Endeavor, WI 53930
608-587-2554
www.bowhanger.com

Figure B: Indoor Use

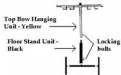

For Hard Surfaces and Indoor Use Only!

B: Bolts on Floor Stand must be tightened with a wrench in order for the Floor Stand to be stable.

Tighten Locking bolts on center post before use.

Floor Stand must be assembled as shown for stability. The bottom cross member must be parallel to the top arms of the Six Bow Hanger.

Note: You will need a 1/2" and a 3/16" wrench.